

INSTALLATION INSTRUCTIONS



 
**Adjustable Wall Mount Standard
DOOR GUIDE**

Installed as a Come Along-Style Door Guide

**To be installed on wood doors
with a mortise running along the bottom of the door
hung on a Bypass Track System**




.....RUSTICAHARDWARE®.....




PARTS AND TOOLS

INSTALLATION INSTRUCTIONS

 
Tools Needed

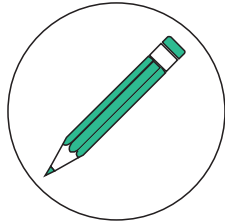

Pencil

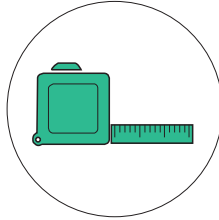 


Tape Measure

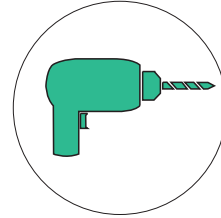 


Drill with Phillips bit

 
Parts Included

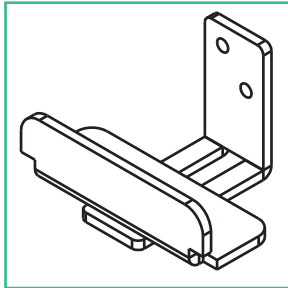

Door Guide

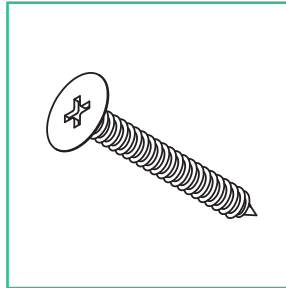 

Grabber Screws

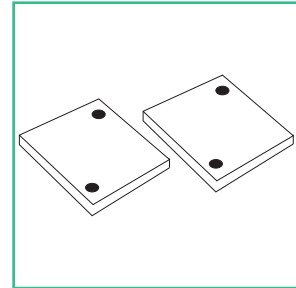 

End Plates

NOTE: This Wall Mount Door Guide will be installed on the front of your Door that is closest to the wall (instead of being installed onto your wall).



 
RUSTICAHARDWARE®




DOOR GUIDE

INSTALLATION INSTRUCTIONS

1. Installing Your Door Guide

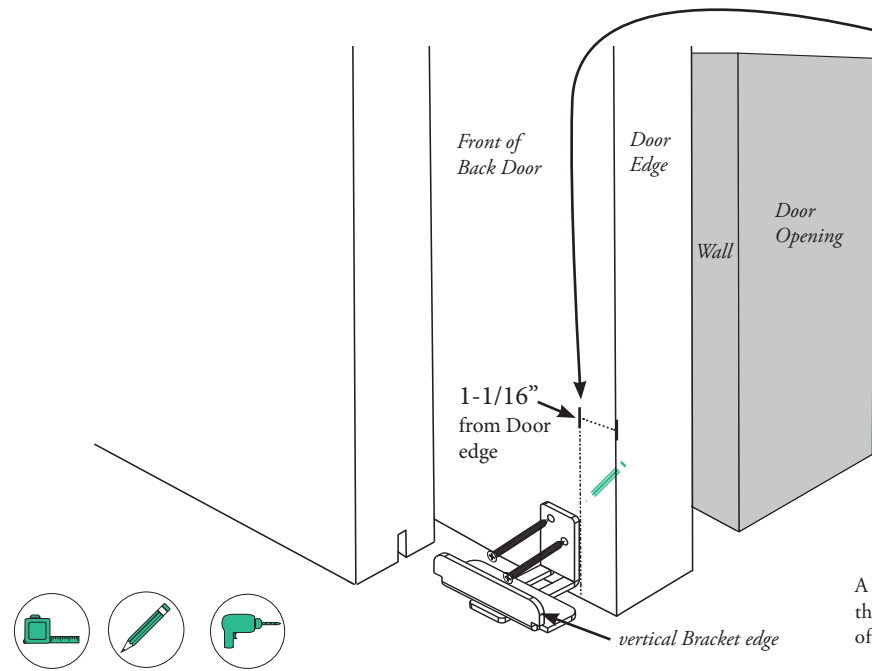


- Slide both doors to the open position. Slide the back door (closest to the wall) out several inches to gain access to the Door. This is where you will install the Guide.
- On the back Door, Pencil a line 1-1/16" parallel to the edge of the door that is closest to your Door opening.
- With the edge of the Bracket **back** lined up with the line you just penciled, shift the Bracket up slightly so the mortise (see below) along the bottom of the front Door will slide over the vertical Bracket edge.
- With a Phillips drill bit, drill a Grabber Screw into each hole in the Bracket back plate.

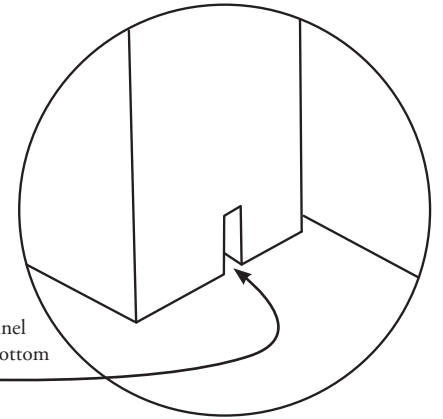 


A mortise is the channel that runs along the bottom of your Door.

 2. Aligning Front Door Over Door Guide

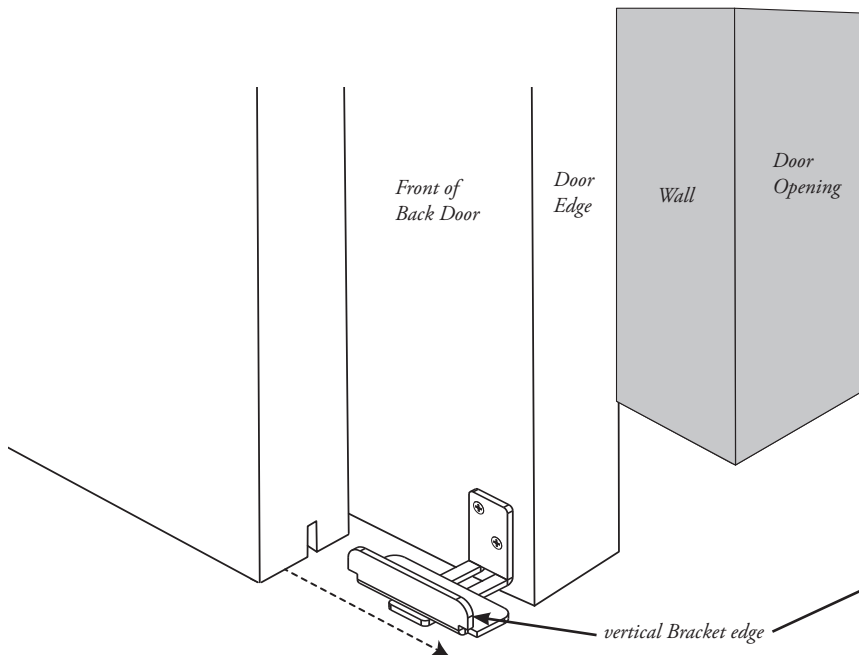

 - Slide front Door so the mortise along the bottom of the Door slides over the vertical Bracket edge.

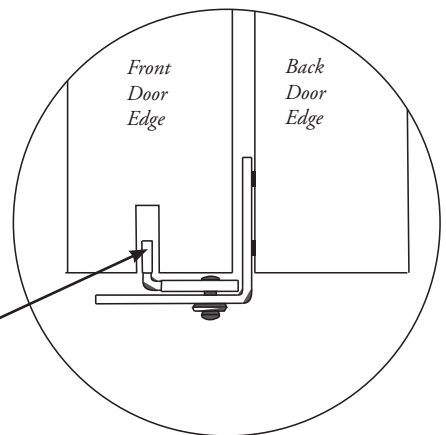


RUSTICAHARDWARE®




HANGER HOLES

INSTALLATION INSTRUCTIONS

 
1. Installing End Plates

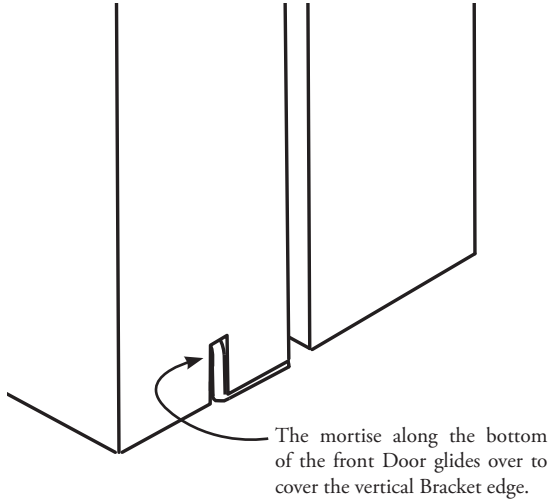

 - Position one of the End Plates over the bottom edge of the front Door, aligning the bottom of the Bracket with the Bottom of your Door.

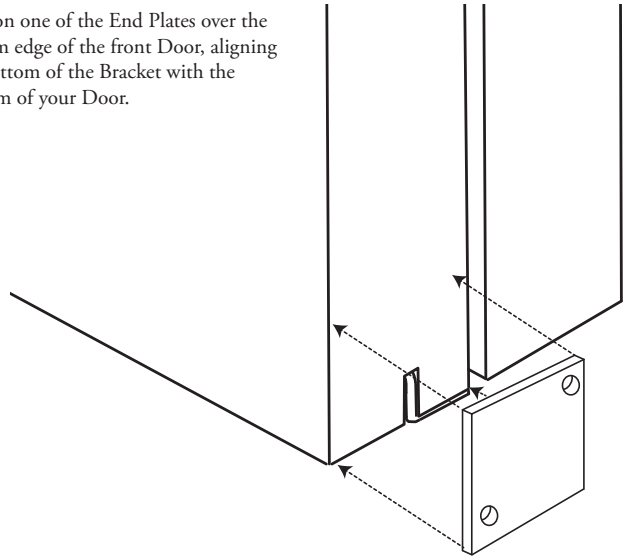

 - Using your drill with a Phillips bit, drill a Grabber Screw into each of the two holes in the End Plate.
- Attach the other End Plate on the opposite edge of this Door, aligning the bottom of the End Plate with the bottom of the Door, covering the mortise.

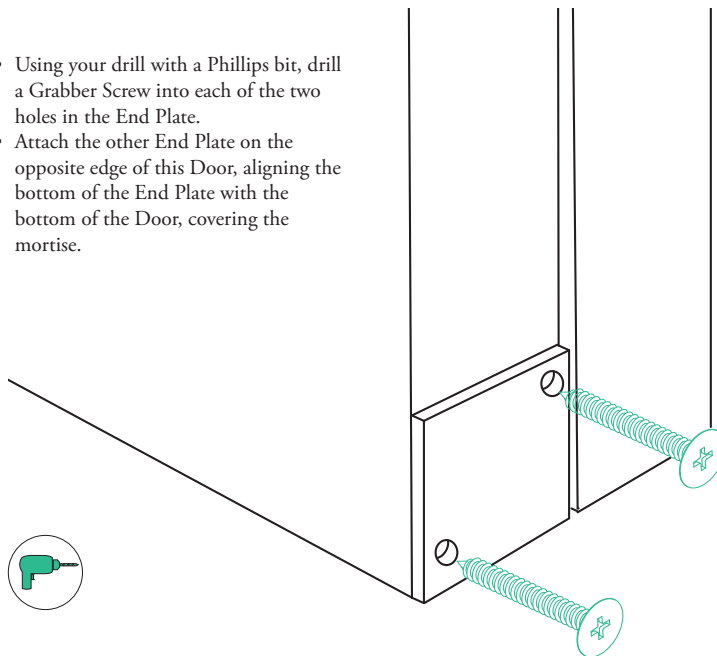

RUSTICAHARDWARE®

